


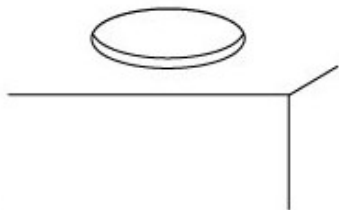


1. Make ~75mm / 3" space for Rescissor:



2. Lock MultiSensor 6 in place within Rescissor:



3. Insert Rescissor - it'll hold itself in place.

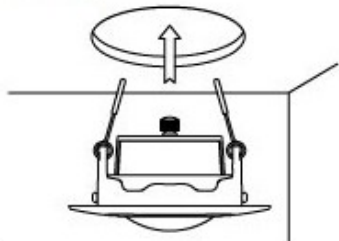

4. That's it!

